



Series 200 Control System Quickstart

Select Configure / Unlock Codes

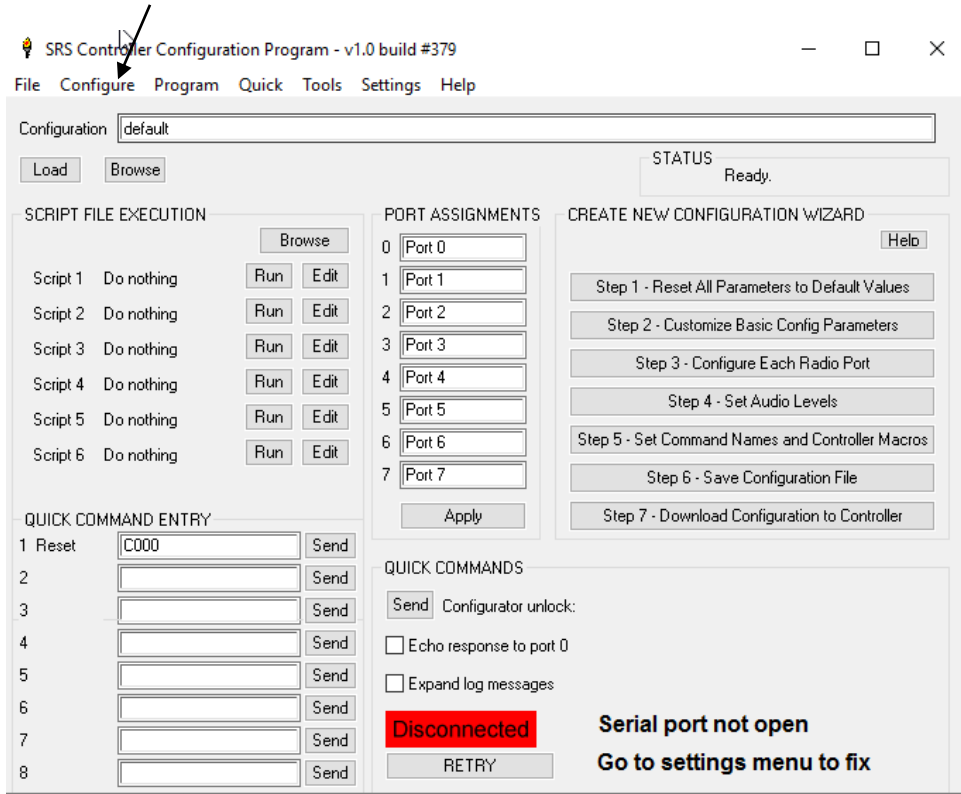

Make sure you have the master unlock code entered
By default it is 138065


Click confirm

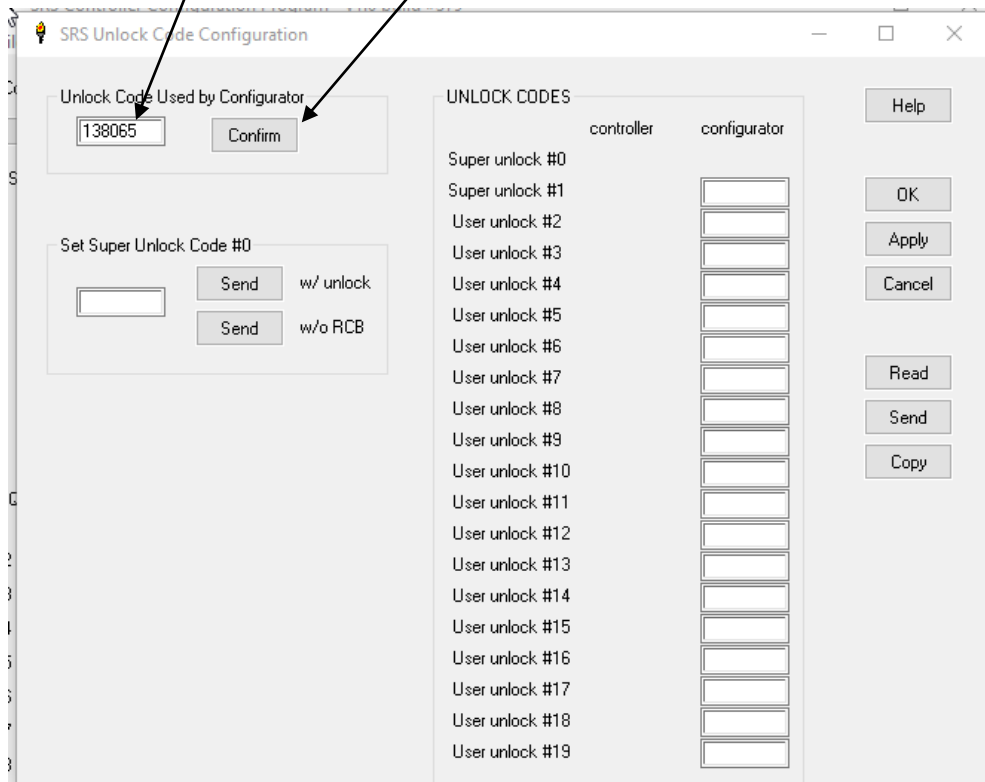

Select

Program / Read configuration from controller

Then click Generate to create the ASCII file containing all the configuration parameters

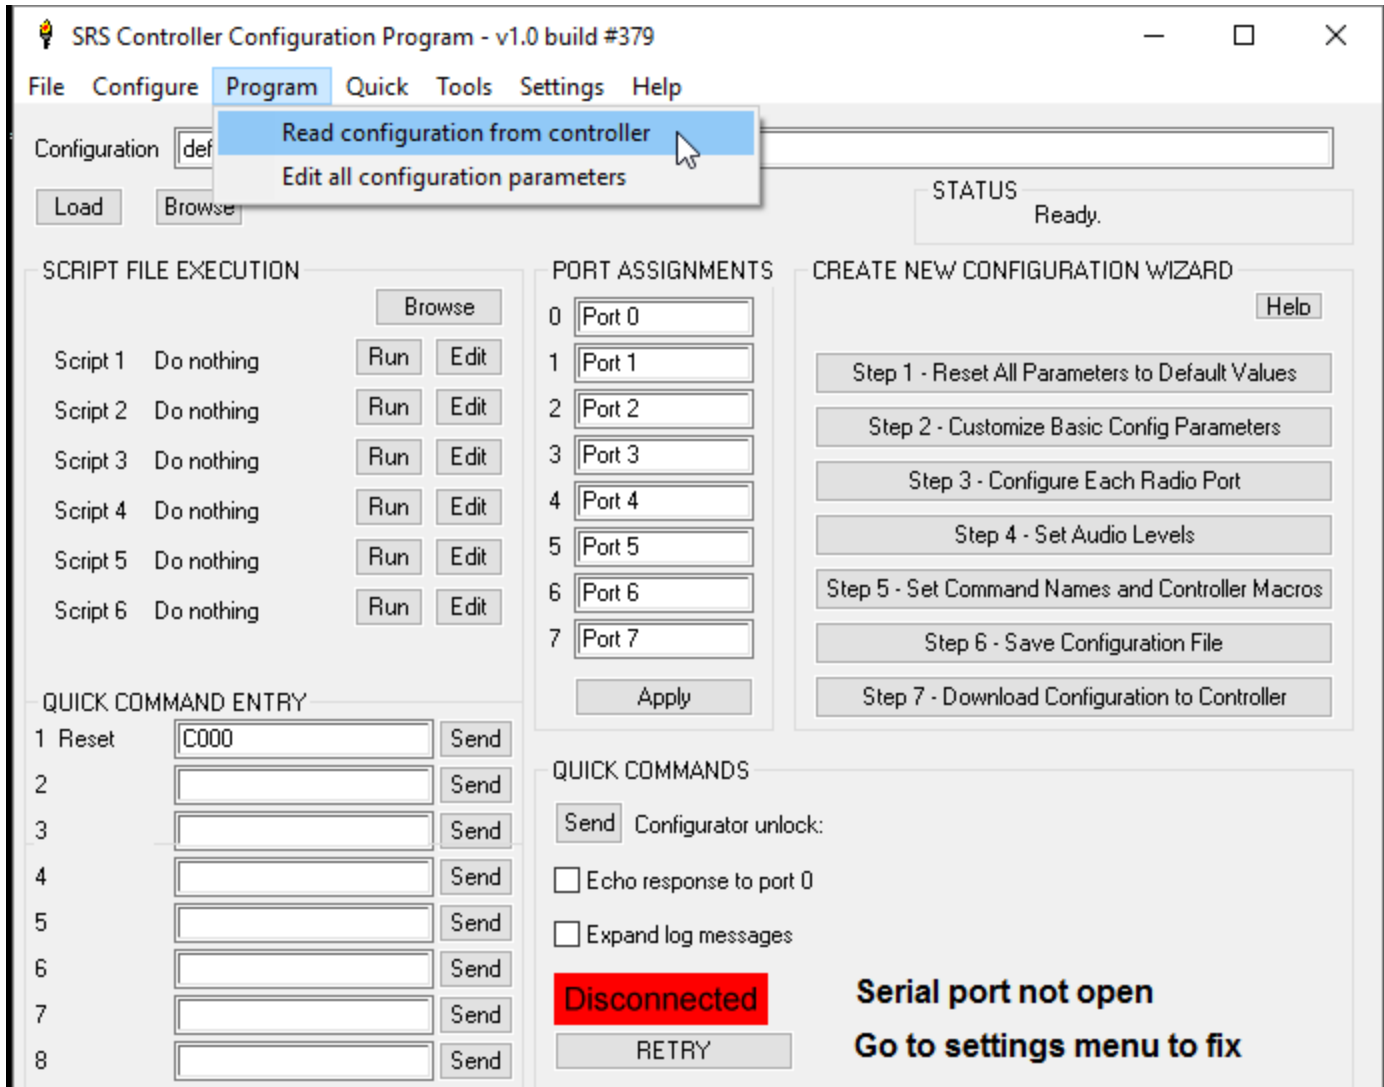

The ASCII config file is human readable and can be edited with Notepad or similar ASCII editor. Don't use Word.

The config file can be played back as a script to reprogram the controller's configuration.

You can also edit out sections and just play back the parts that you want to change.